


RANGEFINDER BASE TRANSMITTER OPERATION INSTRUCTIONS

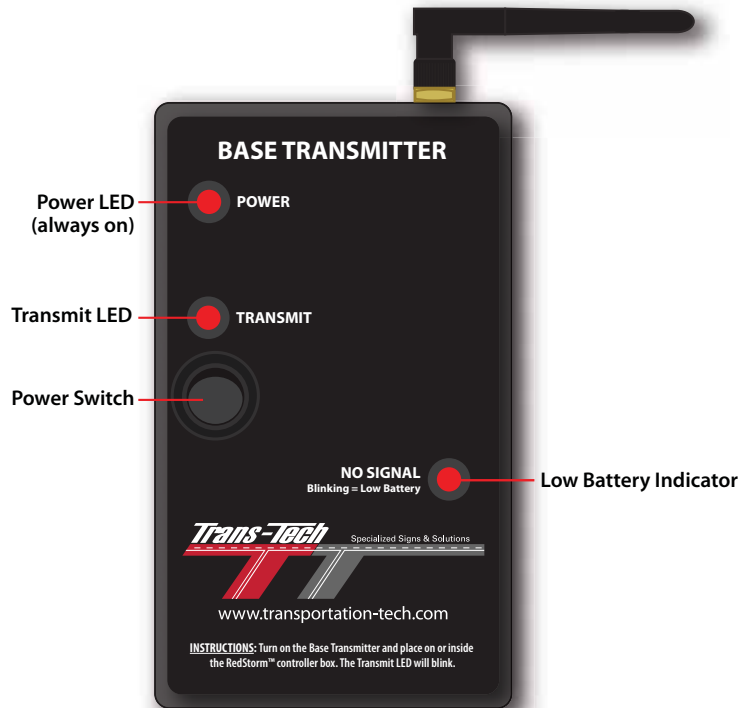

XBee Rangefinder Base Transmitter

Requires:

- 9V battery (alkaline or rechargeable)

Running:

- 1.) Turn on the Base Transmitter and set it on or inside the Redstorm™ case.
- 2.) The Transmit LED will begin to blink about twice per second, and will continue to do so as long as the transmitter is turned on.
- 3.) From here, refer to the Remote Receiver data sheet.

Battery-Low Indicator:

The Low Battery Indicator LED will begin to blink when the battery's voltage has fallen low enough to affect the transmit power of the internal wireless module, which would cause inaccurate readings of signal strength in the Remote Receiver.

When the LED begins to blink, the wireless module switches off to prevent false readings. The only way to clear the low battery indicator warning is to reset the unit with a fresh battery.