


Relay / Sensor Wiring Diagram


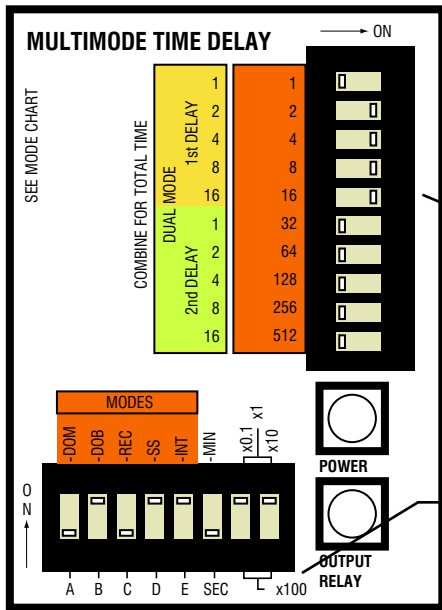


To adjust time delay

Push dip switches to the right that add up to desired amount of delay.

Example at right is set for 30 seconds of delay by pushing the 2, 4, 8, and 16 (which add up to 30) dip switches to the right.

Bottom dip switch is preset at our facility and should not be adjusted.

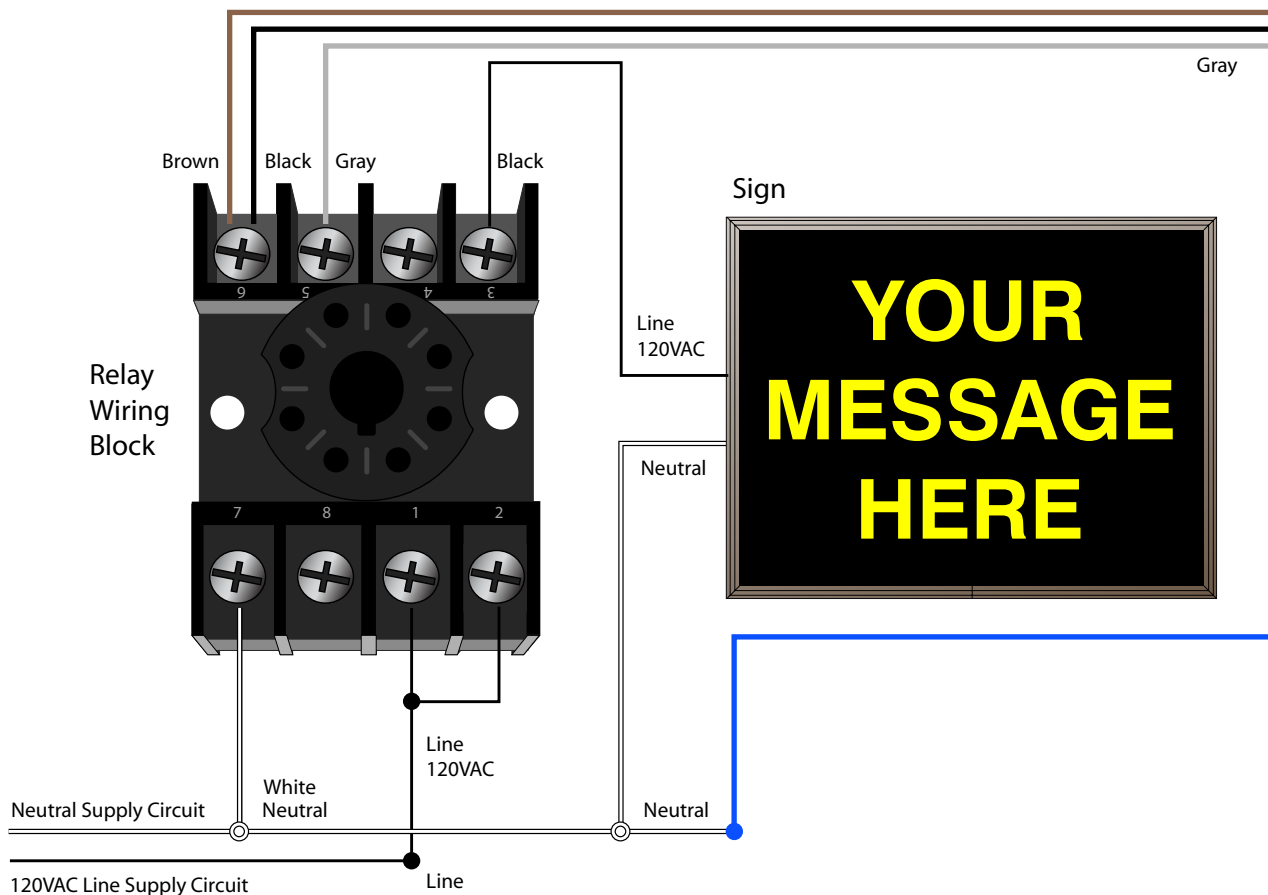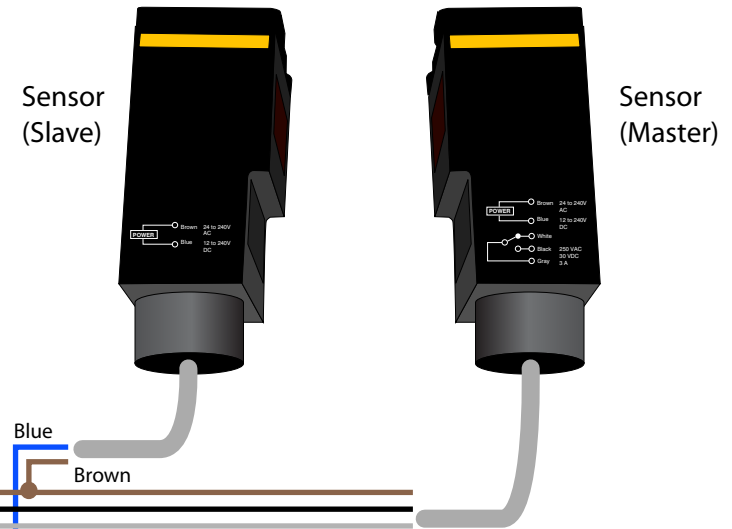

Relay / Sensor Wiring Diagram

- (1) TC1418Y-925 Neon
- (1) Time Delay Relay
- (2) Sensors 1 Master - 1 Slave

TRANSPORTATION-TECH *Trans-Tech* Specialized Signs & Solutions
 4395 Iroquois Ave.
 Erie, PA 16511
 Phone: (888) 811-7010
 Fax: (814) 836-8401
 Email: sales@transportation-tech.com
 Online: www.transportation-tech.com Proudly Made in the USA